

Instruction for Fitting set B.

Article no.: 813

Please read the enclosed instructions for use and assembly before installation and use.

Contents:

1. Advice on security and warnings
2. Guidelines for use
3. Installation

1. Advice on security and warnings.

- This product complies with all prescribed security regulations. Inappropriate use can cause damage to users and product.
- VenSet cannot be held responsible for any damage on the window or other parts of the building, whether it is caused by ordinary use, wrong installation, unauthorized maintenance or incorrect use.
- Please read the instruction before using the window the first time. It will give you important directions as to security, use and installation of the window opener, and thus prevent any damage on both you and the product.
- This product may not be used on windows functioning as emergency exits.
- Please keep this instruction hereafter.

2. Guidelines for use.

- This Fitting set B article no. 813 has been designed to be used together with VenSet electrical window opener article no. 110, when this is to be installed in windows with a sill measuring less than 50 mm.
- This instruction must be used together with the instruction: vej_110_060101.doc.
-
- Point 3 conc. Installation in this instruction replaces point 3 in the instruction: vej_110_060101.doc for VenSet electrical window opener article no. 110.
- Fitting set B is to be used together with standard sill fittings, which are delivered with the electrical window opener.


3. Installation

- Risk of bodily harm. Be careful that the window does not suddenly open or close uncontrollably during the installation of the fitting/window opener.
- The VenSet window opener replaces the ordinary operating and locking devices of the window. Before the installation of the window opener on the enclosed fittings, the window must be opened, and the ordinary operating and locking devices of the window must be removed.

Sill measurements between 0 and 30 mm:

Installation of L-fitting.


Install the L-fitting so that it levels with the sill. If there is no sill to level with, you can open the window.

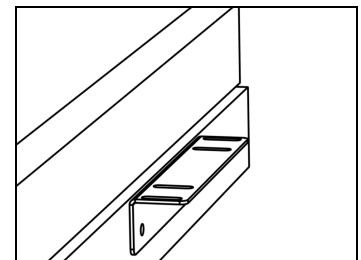

Installation of sill plate.


Install the sill plate on the L-fitting, so that the exterior edge of the sill plate is 53 mm from the frame.

Use the oblong fitting holes and the enclosed screws and nuts. The width of your sill will determine, whether you should use the inner oblong holes or the outer ones.

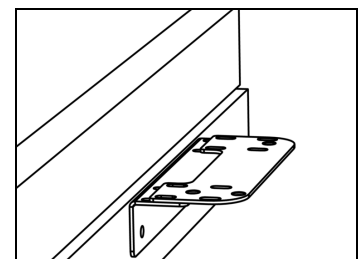


Measuring the holes for frame fitting.

This must be done with the window closed.
Place the screw template from the box right up to the frame and sill. plate.
Adjust the screw template until the two outer XX ?? are between the two oblong fitting holes.
Mark the holes for the frame fitting on the frame.

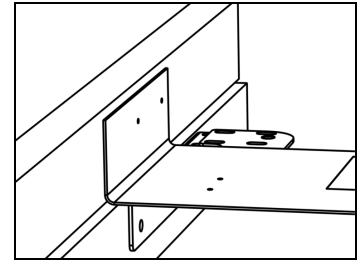


Installation of sill fitting.

Place the sill fitting in the sill plate with the two countersunk screws.
Should you already have placed the sill plate in the L-fitting in the outer oblong fitting holes, you must loosen them again and reinstall them with the frame fitting.

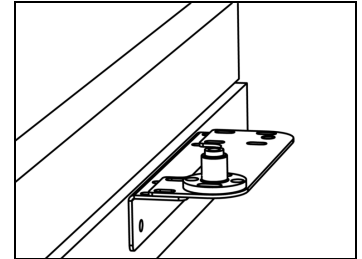

Installation of frame fitting.


Place the frame fitting in the marked holes.
Install the window opener according to vej1_060101.doc

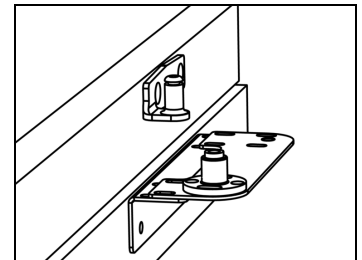

Sill measurements from 30 mm to 50mm


Installation of sill plate.

If your window sill measures between 30 mm and 50 mm, you should not use the L-fitting but only install the sill plate on the sill.
The distance from the outer edge of the sill plate to the frame must be 53 mm.
The width of your sill will determine whether you should use the inner oblong holes or the outer ones.

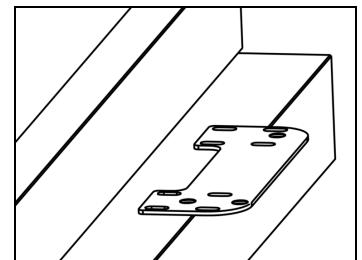


Measuring the holes for frame fitting

This must be done with the window closed.
Place the screw template from the box right up to the frame and sill. plate.
Adjust the screw template until the two outer XX ?? are between the two oblong fitting holes.
Mark the holes for the frame fitting on the frame.

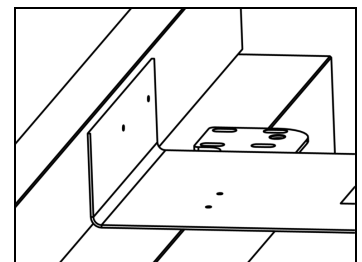


Installation of sill fitting.

Place the sill fitting in the sill plate with the two countersunk screws.
Should you already have placed the sill plate in the L-fitting in the outer oblong fitting holes, you must loosen them again and reinstall them with the frame fitting.

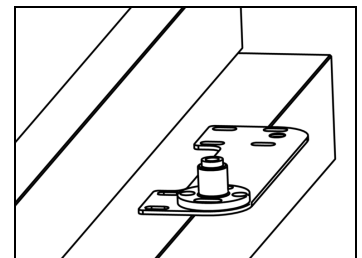

Installation of frame fitting.

Place the frame fitting in the marked holes.
Install the window opener according to vej1_060101.doc

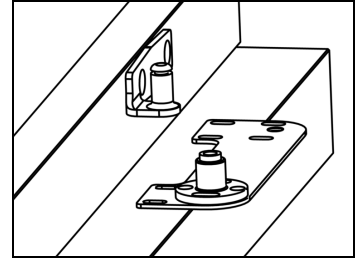

Please see instruction for VenSet electrical window opener article no. 110 for further instructions on use maintenance and legislation.

Manufacturer: VenSet A/S
Nygade 63
Dk-6900 Skjern.
www.venset.com